



CONNECTOR BOOTS

Connector boots are primarily used to provide a means of cable support such as a cable strain relief. They also enhance appearance and provide an attachment point for conduit or other harnessing accessory. Protection from fluids and contamination is normally integrated, and designed into, the connector housing itself. Fluids can also be trapped within the boot if precautions are not taken. Boots and backshells to suit Deutsch connectors are shown elsewhere in this catalogue.

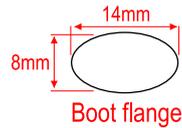


28797

Boot suit 28702, 28703, 28704, 28712, 28713, 28714 Superseal type housings.

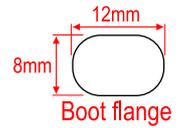


21302

Boot suit 21301 and 21312 Bosch/AMP JPT type housings.

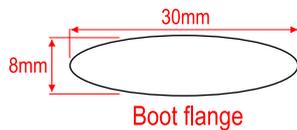


28798

Boot suit 28705, 28706, 28715, 28716 Superseal type housings.

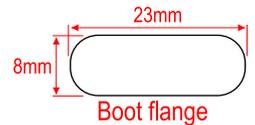

21304

Boot suit 21303, 21306, 21307 Bosch/AMP JPT type housings.

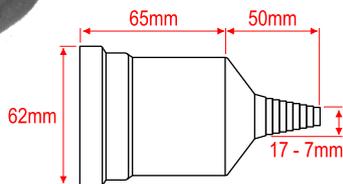

24074

Boot suit 55mm diameter circular housings. Suits 24072.

DEUTSCH DT CONNECTOR BOOTS

Deutsch's range of soft boots suit their DT range of connectors. Whilst they do not increase the already high environmental rating of the connector, they are often used in situations where there is an esthetic / high performance requirement. The boots also provide an area for adhesive lined heat-shrinking conduit to a DT connector or cable strain-relief. Boots are available for DTM housings as special order.



DT2P-BT

Boot suit 27902 2pin female DT housing.



DT8P-BT

Boot suit 27908 8pin female DT housing.



DT4S-BT

Boot suit 27914 4pin male DT housing.



DT3P-BT

Boot suit 27903 3pin female DT housing.



DT12P-BT

Boot suit 27901 12pin female DT housing.




DT6S-BT

Boot suit 27916 6pin male DT housing.



DT4P-BT

Boot suit 27904 4pin female DT housing.

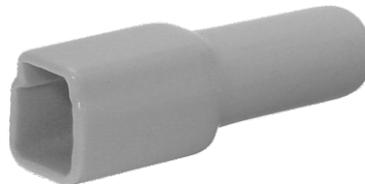

DT2S-BT

Boot suit 27912 2pin male DT housing.



DT8S-BT

Boot suit 27918 8pin male DT housing..



DT6P-BT

Boot suit 27906 6pin female DT housing.



DT3S-BT

Boot suit 27913 3pin male DT housing.




DT12S-BT

Boot suit 27911 12pin male DT housing.

DEUTSCH DT BACKSHELLS

Deutsch's range of hard backshells suit their DT range of connectors. Whilst they do not increase the already high environmental rating of the connector, they are intended as a means to attach conduit, heatshrink or other forms harness covering. The backshells also act as a cable strain-relief.

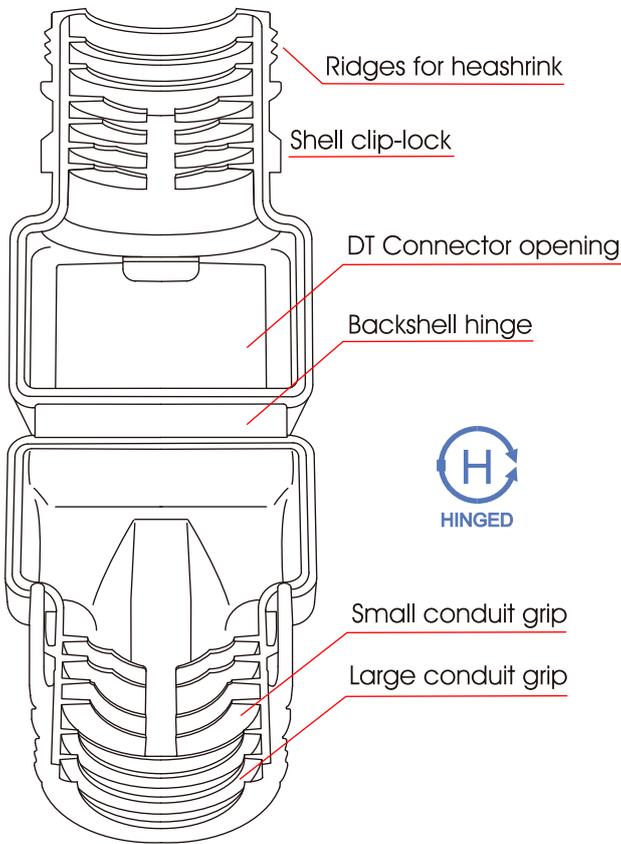

Deutsch DT Connector Backshells

- Simply clip onto the DT housing prior to assembly
- Quick to assemble hinged shell
- Black suits conduit
- Clips over loom tube of varying sizes - has multiple grip ranges
- Works with split and unsplit conduit sizes
- Works with heathshrink - has grip ridges for attaching adhesive lined heatshrink
- No tools required for assembly
- No tools required for disassembly
- Reusable
- Available in straight or 90° degree angle

P/No.	DT Housing	Angle	Suits Polyethylene Conduit	Suits Polyflex Conduit
DT2S-BS	27912	Straight	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT2S-BS90	27912	90°	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT2P-BS	27902	Straight	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT2P-BS90	27902	90°	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT3S-BS	27913	Straight	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT3S-BS90	27913	90°	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT3P-BS	27903	Straight	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT3P-BS90	27903	90°	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT4S-BS	27914	Straight	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT4S-BS90	27914	90°	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT4P-BS	27904	Straight	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT4P-BS90	27904	90°	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT6S-BS	27916	Straight	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT6S-BS90	27916	90°	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT6P-BS	27906	Straight	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT6P-BS90	27906	90°	20007 / 200071 / 20010 / 200101	1200070 / 1200089 / 1200100
DT8S-BS	27918	Straight	20010 / 200101	1200089 / 1200100 / 1200135
DT8S-BS90	27918	90°	20010 / 200101	1200089 / 1200100 / 1200135
DT8P-BS	27908	Straight	20010 / 200101	1200089 / 1200100 / 1200135
DT8P-BS90	27908	90°	20010 / 200101	1200089 / 1200100 / 1200135
DT12S-BS	27911	Straight	20010 / 200101 / 20013 / 200131 / 20016 / 200161	1200100 / 1200135 / 1200178
DT12S-BS90	27911	90°	20010 / 200101 / 20013 / 200131 / 20016 / 200161	1200100 / 1200135 / 1200178
DT12P-BS	27901	Straight	20010 / 200101 / 20013 / 200131 / 20016 / 200161	1200100 / 1200135 / 1200178
DT12P-BS90	27901	90°	20010 / 200101 / 20013 / 200131 / 20016 / 200161	1200100 / 1200135 / 1200178